



## High Performance Key-Valve®



### **Falcon High Performance Key-Valve (HPKV) – Change Instructions**

Once the green Key-Ring has been fully utilised it is time to change the Key-Valve

1. Insert changeout key (sold separately from HPKV) into existing Key-Valve. Ensure the plastic lugs in the changeout key are engaged and then turn anti-clockwise to remove the old Key-Valve from the housing
2. Dispose of the old cartridge appropriately
3. Engage the plastic lugs in the changeout key into the new Key-Valve by turning it anti-clockwise
4. Insert the new Key-Valve into the housing using the changeout key and then turn clockwise to secure it in place. Finally remove the changeout key and retain for future use

### **Storage**

Store in a dry place out of direct sunlight at temperatures between 15°C and 25°C

### **Warning**

This valve has been designed and tested to operate only as manufactured. Under no circumstances should the valve be altered in any way

**Contains:** Turpentine oil (<5%);

H315 – causes skin irritation; H317 – may cause allergic skin reaction; H319 – causes serious eye irritation; H412 – harmful to aquatic life with long lasting effects; P280 – wear protective gloves for installation