




Key to a Successful Installation – Waterfree Urinals

Pre-installation drain line cleaning

We highly recommend cleaning drain pipes prior to installation!

- It is crucial that waterfree urinals be installed on clean drain pipes, free of obstructions and mineral buildup.
- Clean 7.5 – 11 m deep, to the main stack if possible.
- Thoroughly flush the drain lines with water to remove cutting debris

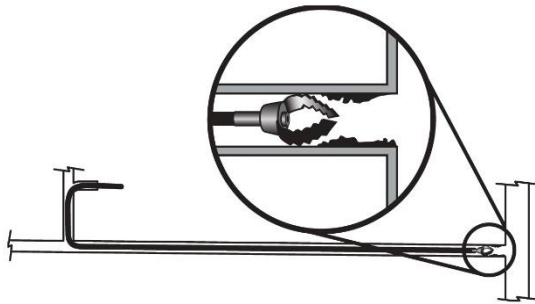

- Drain pipes should also have proper slope, to allow complete drainage of liquid through the piping system after each use.
- As with any other gravity drainage system, standing liquid left in the piping system due to obstructions, mineral buildup or improperly sloped pipes, could result in future clogs.

Slope Requirements

2" pipe requires a minimum fall (slope) of 20.0 mm per m (2% grade)

Important

Do not fit a trap or u-bend

Proper Ongoing Maintenance

With the urinal installed properly and water flowing freely down the housing into the drain line, review and follow the Cleaning and Cartridge Change out Instructions. Instructional video is available online [here](#).