
Falcon Waterfree Urinals

Cleaning and cartridge change instructions

URINAL BOWL CLEANING INSTRUCTIONS



Spray (mist) cleaner on entire bowl.

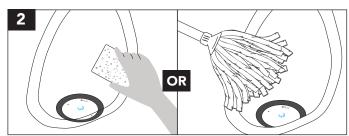

Clean outside and inside of bowl with rag, sponge, or mop to remove any debris.



WHEN SHOULD A CARTRIDGE BE CHANGED?



VELOCITY CARTRIDGE CHANGING INSTRUCTIONS



Insert key into cartridge.



CAUTION After removing cartridge from housing, certain naturally occurring but potentially hazardous sewer gases may escape through the opening until re-installed properly. If replacement cartridge will not be re-installed immediately, place a rag or


paper towels into opening to block any sewer gases. Remove the paper towels or rag prior to inserting new cartridge. Alternatively, use Falcon Foam Housing Cleaner to both clean housing and reduce any outflow of sewer gases through open housing during cartridge change. Never smoke, have an open flame, or place your nose or mouth near waterless urinal housings into which a cartridge is not yet properly installed. You also can wear a breathing mask when removing or installing any waterless urinal or cartridge to reduce potential exposure to any such gases.




Insert new cartridge into housing and turn key to right (clockwise) to lock and click into place.



Turn key to left (counter clockwise) to unlock.




Scrub housing and deep inside tailpipe with a long 1.5-inch diameter nylon brush.



Slowly fill cartridge with 1 quart (1 liter) or more of clean water until there are no air bubbles.



Lift and tilt cartridge to drain all free liquids, then spray Falcon Foam Housing Cleaner into housing.



Flush housing with 5 gallons (20 liters) of hot soapy water.



Add blue sealant (allow time to drain into cartridge).



Wipe clean inner stainless



steel rim.

Spray (mist) bowl with cleaner and wipe clean.





The Oast, 62 Bell Road, Sittingbourne, Kent ME10 4HE T: 01795 423400 F: 01795 436070 E: info@therodingroup.co.uk W: www.therodingroup.co.uk